

# Knowledge Base

 
## nEar08 eXperience connectors & functions

original release: 2012-04-17 | ID: KB00007EN



This text describes the layout and main functions of the rear panel of our nEar08 eXperience active monitors.

### Rear Panel



**1. XLR input** - this connector accepts balanced XLR input connections. The signal of the XLR input is mixed together with the TRS input signal through a balanced input amplifier. The XLR input is wired like this:

INPUT SIGNAL	XLR CONNECTIONS
+	PIN 2
-	PIN 3
Shield	PIN 1

**2. TRS input** - this jack accepts TRS input connections, either balanced or unbalanced. For balanced connections, a 3-conductor TRS plug is necessary. The TRS input is wired like this:

INPUT SIGNAL	TRS CONNECTIONS
+	Tip
-	Ring
Shield	Sleeve

Unbalanced wiring works with either a 2- or 3-conductor TRS connector. A 2-conductor TRS plug (or sometimes also just called TS plug) automatically grounds the minus signal input, whereas a 3-conductor TRS plug wired unbalanced provides the option of leaving the minus open or grounded. We recommend that you ground the unused part.

**3. serial number** - this label contains the product serial number.

**4. vent port** - nEar08 eXperience is a vented box speaker system with a vent port on the rear panel. Make sure you are not blocking the vent port (i.e. by putting the speaker too close to a wall) or the sound colour will be changed.

**5. volume control knob** - use the volume control knob to set the proper input level from the sound source. Make sure to setup the left / right speakers accordingly.



# Knowledge Base

## nEar08 eXperience connectors & functions

original release: 2012-04-17 | ID: KB00007EN

**6. high frequency level selection** - this rotary switch allows you to change the level of the high frequencies in the signal to control room dumping in the range -2 to +1 dB in 1dB steps. Depending to your specific listening environment whether they require such a change, you can adjust it here. The recommended default is the 0dB setting.

**7. low frequency boost selection** - this rotary switch allows you to change the level of the low frequencies in the signal great for tuning the nEar08 eXperience if you are using a separate subwoofer like the ESI SW10K eXperience.

**8. power switch** - when you push the power switch, nEar08 eXperience will be turned on, and -surprise- it will be turned off when you push the power switch again.

**9. power port with ext. fuse** - use this connector to plug in the detachable 3-circuit line cord that connects to the power outlet. The connector also contains the mains fuse for protection.

**10. AC selection** - you can select either 110V or 230V AC power according to your local requirements. Make sure this is selected properly before you switch on nEar08 eXperience for the first time or your equipment could be damaged.