

# Knowledge Base

## Installation of Juli@ XTe under Windows Vista & 7/8 (up to v1.16)

original release: 2012-06-12 | ID: KB00059EN



### Introduction

This covers the installation of the Windows Vista and Windows 7/8 driver of Juli@ XTe up to version 1.16. The driver works with both 32-bit and 64-bit systems. If you have installed a previous driver already, you need to remove it first - this is described below in the uninstallation section . Then you can proceed with driver installation . A description of the installation with later drivers (starting from version 1.17) can be found here.

 
### Installation

Make sure that you have downloaded and unzipped the driver file . Install the Juli@ XTe hardware in your computer or if you have previously uninstalled an older driver, reboot your system. When booting the system, Windows will detect the hardware as a new device and a *Found New Hardware* dialog will appear automatically.

Note: if the hardware is already installed in your PC but you did not install a driver, please find the entry for an unknown *Multimedia Audio Controller* in *Control Panel > System > Device Manager* . Right click on that and select the driver update option.




Make sure to click on *Locate and install driver software (recommended)* . The following dialog will appear after some time:




# Knowledge Base

## Installation of Juli@ XTe under Windows Vista & 7/8 (up to v1.16)

 original release: 2012-06-12 | ID: KB00059EN



 Click on *I don't have the disc. Show me other options.* to continue. Please note that it might take some time until the next dialog appears:



Proceed by clicking on *Browse my computer for driver software (advanced)* . The following dialog will be shown:

# Knowledge Base

## Installation of Juli@ XTe under Windows Vista & 7/8 (up to v1.16)

original release: 2012-06-12 | ID: KB00059EN

 


Click on *Browse...* and then select the folder that contains the unzipped driver. Click *OK* and then *Next*. The driver installation will now start. After some time, you will be prompted to confirm a *Windows Security* message. Make sure to click *Install* to continue.


# Knowledge Base

## Installation of Juli@ XTe under Windows Vista & 7/8 (up to v1.16)

original release: 2012-06-12 | ID: KB00059EN



 The driver installation will now be completed until the following dialog appears:



Congratulations - you can now use Juli@ XTe in your system. The control panel will appear after a few seconds in the task notification area of the taskbar.

### Uninstallation

 
# Knowledge Base

## Installation of Juli@ XTe under Windows Vista & 7/8 (up to v1.16)

original release: 2012-06-12 | ID: KB00059EN



To uninstall the driver, you can use an utility that is included with the driver. Make sure you have unzipped the driver file . Open Windows Explorer and find the correct driver folder. If you are using Windows Vista/7/8 32-bit, go to the *win32* folder and launch *UnInstall\_32* by double clicking on it. If you are using Windows Vista/7/8 64-bit, go to the *x64* folder and launch *Uninstall\_64* by double clicking on it. When launching the uninstaller, Windows Vista might prompt a security message. Make sure to allow the uninstallation. The following dialog will appear:



Click on *Uninstall*. After a few seconds, this dialog confirms the procedure:



Note that in some cases, Windows will ask you if the uninstaller worked, confirm this with *This program installed correctly* . To re-install the updated driver ( as described above ), you need to reboot the system.

