

Knowledge Base

Can I use Juli@ / Juli@ XTe without the analog PCB?

original release: 2013-03-15 | ID: KB00131EN



It is possible to install only the lower interface PCB of Juli@ or Juli@ XTe into a computer, without the analog PCB. In such a setup, only digital I/O and MIDI I/O would be available, but no analog I/O.

This information is mainly based on customer feedback. Some users only want to send out digital data (or record it). Please note however, that Juli@ and Juli@ XTe have not been developed for this application and as a result we cannot offer any additional technical support for this operation beside this basic information.

The lower digital part of the PCB is not available for purchase separately.

