

QuataFire XL: Readme

driver and control panel for Windows Vista

version: 1.19.1 | date: 2008-04-28 | filename: QuataFire_XL-Vista32-v1_19_1.zip | product: QuataFire XL

 


QuataFire XL under Windows Vista


Please note that this driver requires a 32-bit version of Windows Vista. It cannot be used with other versions of Windows.

Installation

First download and unzip the driver file. Make sure that QuataFire XL is **not** connected to your computer and switched off before you install the driver. Then launch *setup.exe* from the unzipped folder. When launching the installation, Windows Vista might prompt a security message. Make sure to allow the installation. You will then see a dialog as shown on the following picture.



 Click *Next*. You can define the target directory for the installation in the following dialog.




Confirm it with *Next*. The installer now informs you that the driver installation will start as shown below.




QuataFire XL: Readme

driver and control panel for Windows Vista

version: 1.19.1 | date: 2008-04-28 | filename: QuataFire_XL-Vista32-v1_19_1.zip | product: QuataFire XL

 

 Confirm this with *Next*. During the following process you will see a *Windows Security* dialog box that asks you for confirmation to install the driver software that looks like this:




Confirm any such dialog with *Install* even if it gets displayed multiple times . You will then be prompted to connect the hardware in the dialog shown below.



QuataFire XL: Readme

driver and control panel for Windows Vista

version: 1.19.1 | date: 2008-04-28 | filename: QuataFire_XL-Vista32-v1_19_1.zip | product: QuataFire XL

 

Plug in QuataFire XL and switch it on, but do **not** click *Next* yet. Instead, wait a few seconds for the automatic device driver installation ... typically this will take up to 30 seconds depending on your system performance. If you click *Next* too early, the same dialog will appear again.

Once you have clicked *Next* in the *QuataFire 610 Audio Driver Setup* dialog shown above, the installation will be finished and you can start using QuataFire XL in your applications.

